

OWNER'S MANUAL

V6HL PRO

6 Channel High Performance Hi to Lo Conversion









SPECIFICATIONS

•	Maximum Speaker-Lev	ell	npu	t:	•	•	•	•	•	•	4	00) W	/at	ts a	at 4	ohm	S
•	Max Output Level:	•	• •	•	•	٠	•	•	٠	•	•	•	٠		S	9.5	√rms	
•	Frequency Response:.	•	•	•	•	•	•	•	٠	•	•	٠	1	0 F	Hz ·	- 22	2 KHz	Z
•	Output Gain:	•	•	•	•	•	•	•	•	•	•	•			+	/-	12 dE	3
•	Total Harmonic Distortion	on:	•	•	•	•	•	•	•	•	•	•	•			Ο.	01%	
•	Input Impedance:	• (•	•	•	•	•	٠	•	•	•	•	•		2	0 K	ohm	S
•	Power Supply:		•	•	•	•	Hi	igh	ı H	ea	dr	00	m	PW	/M	Sw	ritchi	ng
•	Power Draw:		•	•	•	•	•	•	•	•	•	•	•	•		20	00 m	4
•	Recommended Fuse Ra	tinç	g: .	•	•	•	•	٠	•	•	•	•	•	•	•	,	1 Amı	р
•	Remote Trigger Output	Cur	ren	†: <u>.</u>	٠	•	•	•	•	•	•	•	•	•	•	•	1 m	Α
•	Dimensions:										8"	۱۸۸	'	6 1	" D	v 1	25"	Н

FEATURES

- 6 Input and Output Channels
- Speaker-Level Inputs Can Accept 400-Watts MAX Signal
- Internal Channel Summing
- Signal-Sensing Inputs
- Level Matching Controls
- 12 Volts Trigger Output (Remote Out)
- Remote Subwoofer Level Control Included
- Tiffany RCA Jacks




• Internal Channel Summing:

Sums Together the Factory Inputs (4 to 6) Into 2 Channels. With the **V6HLPRO**, all the actively Crossed Over Signals Become One; Thus Delivering High-Quality, Full-Range, Pre-Amp Signal without Additional Hardware.

• Automode Inputs:

V6HLPRO is Equipped with Inputs that Automatically Feed the Rear Channel Signal to Subwoofer Channel Outputs. Therefore, 2 Input Channels give you 4 Outputs, and 4 Input Channels give you 6 Outputs.

GUIDED TOUR:

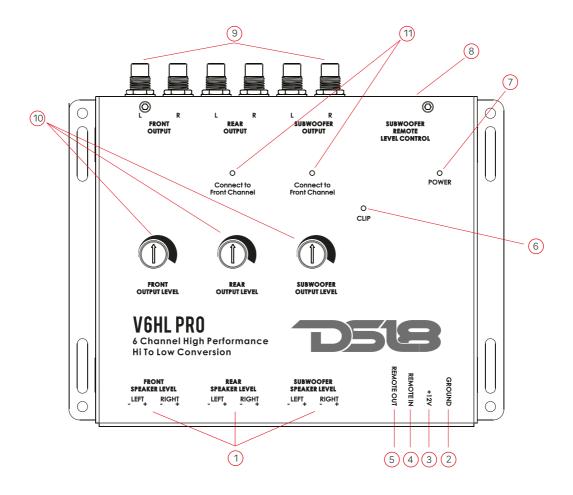

V 6 H L



PR0



1 Speaker-Level Input:

These inputs get their signals from the speaker-level outputs of your factory-installed source unit or amplifier

2 Ground:

Connect to a good, verified chassis ground.

3 +12 Volt:

Connect to a good, verified source of power.

4 Remote In:

Allows your **V6HLPRO** to be turned on remotely with a 12 Volt Signal.

5 Remote Out:

Outputs 12 Volts when your V6HLPRO is powerd up.

6 Clip Indicator:

This LED indicates when your signal level is just below clipping. This LED should flicker occasionally when your system is playing at its maximum volume level.

7 Power:

This light should be bright red when your system turns on.

8 Remote Subwoofer Level Control Input:

This input allows you to add the remote that will allow you to control the subwoofer output from your dashboard.

9 Pre-Amp Output:

These RCA Connectors Should be connected to the next component, such as signal processor, crossover or amplifier.

10 Level Controls:

These knobs allow you to adjust the signal level from your source unit to match that of your aftermarket amplifiers.

11 Channel Summed Indicators:

Under the cover of your **V6HLPRO** are jumpers that will allow you to sum selected channels into the main channels. The LED's indicator let you know which channels are being summed into the main inputs.

V 6 H L



P R O




INSIDE VIEW

Output Summing Jumpers:

These jumpers let you select the input signal that will be summed into the main output. A LED light on the front indicates when the jumper is in the summed position.

Ground Isolation Selector:

If the source unit and the amplifier are using different grounding setups, the alternator may cause noise in the system. In order to prevent this, you will find included alternative grounding connections. TURN OFF YOUR SYSTEM BEFORE MOVING THE JUMPERS.

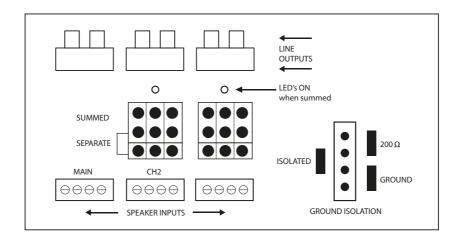

Factory Settings - Internal Jumpers

JUMPERS	FACTORY	OPTIONS						
GROUND ISOLATION	Isolated	200 Ohms / Ground						
SUMMING JUMPERS	Separate	Summed						


V 6 H L



PR 0



INSTALLATION

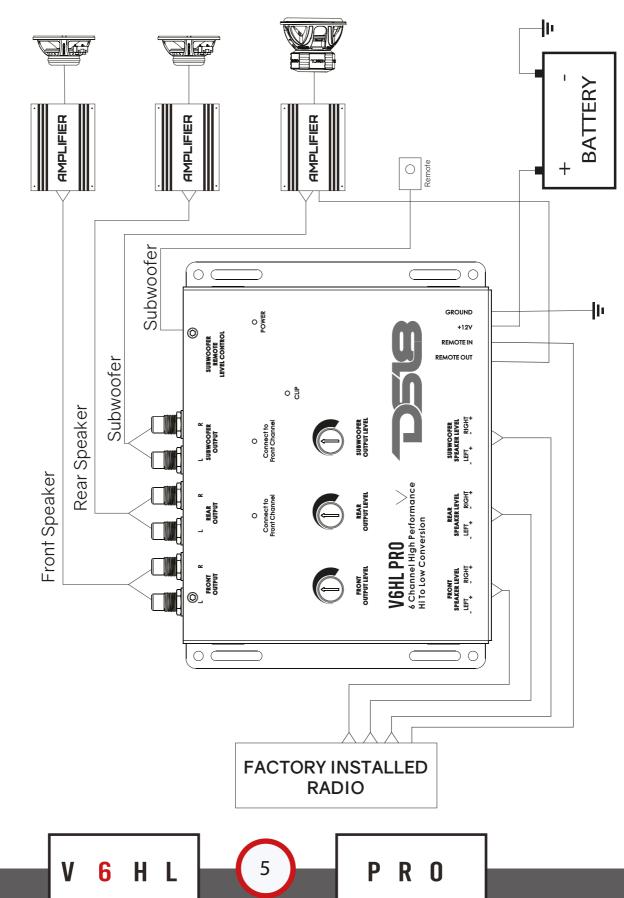



SERVICE WARRANTY

Should your V6HL PRO require service please consult with the dealerfrom which it was purchased, or Cadence Local Dealer.

Do not attempt to return your V6HL PRO directly to us without first calling for a Return Authorization Number. Units received without Return an accompanying Authorization Number will be processed slower. Aditionally, you must include a copy of your purchase receipt from an authorized dealer for consideration of in-warranty service; otherwise repair charges will apply. Units received without a receipt will be held for 30 days, all units will be returned to you, unrepaired.

V6HL PRO

6 Channel High Performance Hi to Lo Conversion







